

PRODUCT MANUAL

GlassTouch Pro-S 4-Zone Wireless Dimmer Wall Switch 120V AC



Contact Us: 425.582.7533

www.SolidApollo.com

Andrew@SolidApollo.com

Manual Content

- Product Information
- Product Diagram and Parts
- Product Wiring and Installation
- Product Operation
- Product Troubleshooting

Product Description

Solid Apollo brings you the perfect solution for controlling single-color LED fixtures in multiple areas of your home or business. Our GlassTouch Pro-S 4-Zone Wireless Dimmer can control up to four zones or areas independently and lets you save up to three brightness settings that can be played in any zone.

The GlassTouch Pro-S dimmer perfectly installs in any single gang box unit that has a live.

This classic low-profile LED Dimmer is designed with simple backlit touch controls that let you see and use the dimmer even in a low light setting.



Product Features

- 1 x GlassTouch Pro-S 4-Zone Wireless Dimmer
- 1 x 8A Dimming-Receiver
- Perfectly installs in any single gang box unit
- Easy installation and operation
- Controls single-color LED fixtures
- Control up to four zones independently
- Save up to 3 brightness settings
- Full dimming from 100% – 1%
- Impressive 65 feet wireless range
- Soft ramping ON/OFF technology
- Subtle back light for operation in dark area
- Pairs to unlimited number of dimming-receivers
- Memory Function - Remembers last setting before losing power.

Product Specs

GlassTouch Pro Dimmer

- Dimming : 100% to 1%
- Input Voltage : 100V - 240V AC
- Control Zones : 4
- Weight : 0.60 lb
- Control System : Radio Frequency
- Frequency : 916.5 MHz
- Range : 65ft
- Dimension : 4.7" x 3.0" x 1.2"

Dimming-Receiver

- Input Voltage : 12V - 36V DC
- Max Power : 96W@12V DC
288W@36V DC
- Max Amps : 1 x 8A
- Dimensions : 3.7" x 1.5" x 0.8"
- Weight : 0.15 lb
- IP Rating : IP20
- Working Temp : - 4F - 120F
- Warranty : 3 Years
- Certificates : CE, RoHS

PRODUCT MANUAL


GlassTouch Pro-S 4-Zone Wireless Dimmer Wall Switch 120V AC




Contact Us: 425.582.7533
www.SolidApollo.com
Andrew@SolidApollo.com

Product Diagram and Parts

Dimmer

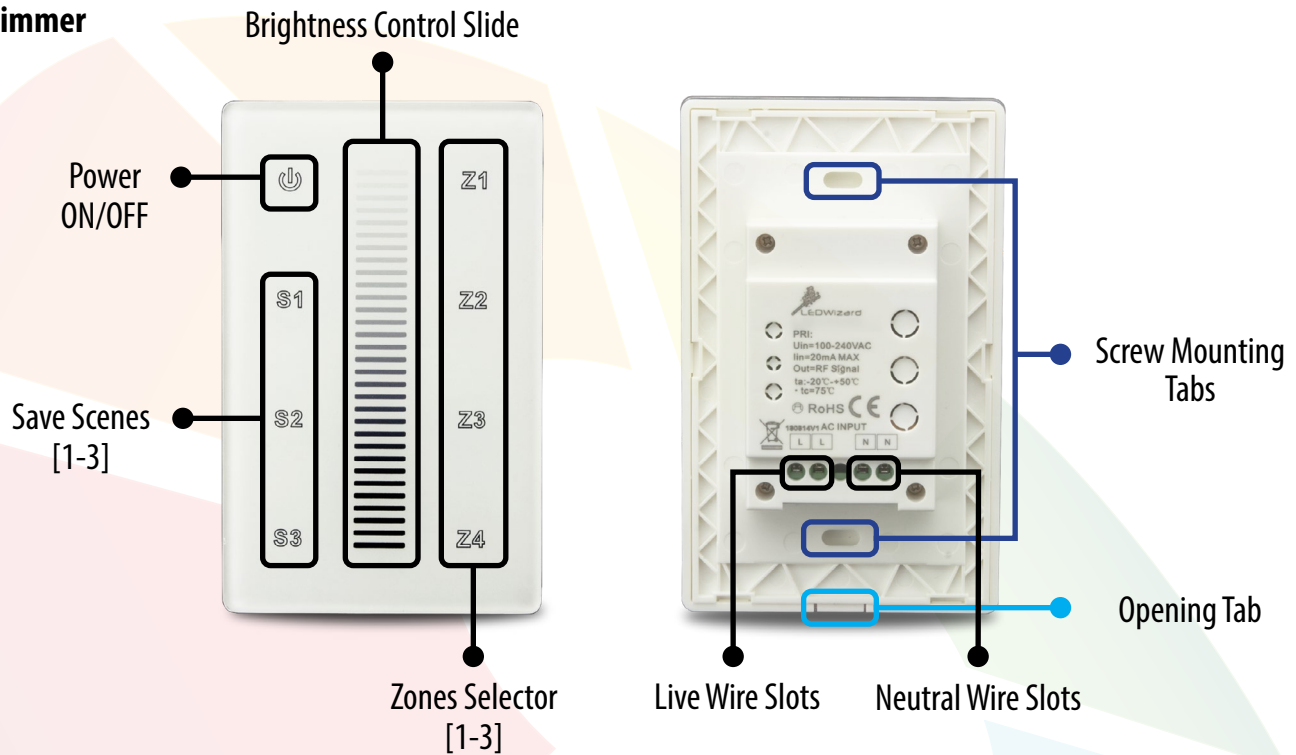

Dimming-Receiver

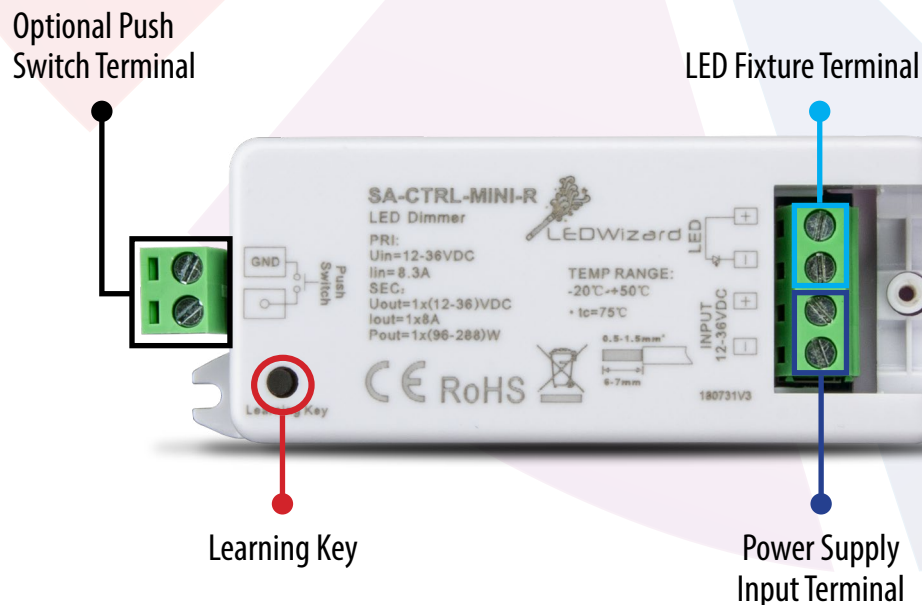

PRODUCT MANUAL

GlassTouch Pro-S 4-Zone Wireless Dimmer Wall Switch 120V AC



Contact Us: 425.582.7533
www.SolidApollo.com
Andrew@SolidApollo.com


Product Wiring and Installation

Wiring of Dimming-Receiver

The tools required for the installation are Philips head screwdriver, slot head screwdriver and wire strippers.


Step 1:

Unscrew and remove the white plastic endcap to expose the green wiring terminal blocks.

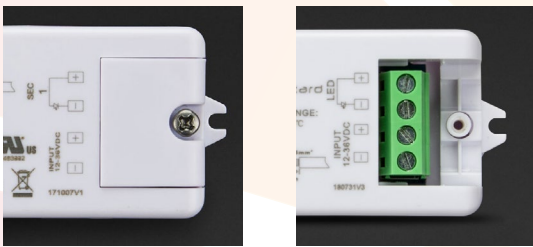

Step 2:


To add power, strip off about ¼-inch of the plastic jacket from the ends of the power supply wires to expose the metal strands. Twist each wire to bind the strands together for a better installation.

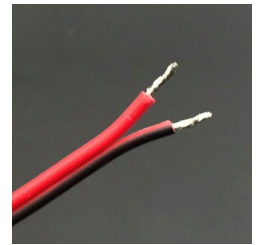

Please Note: Make sure that the power supply is NOT connected to a power source.


Step 3:

Open the green terminal-block slots located below the screw, by partially unscrewing the screws on the top.

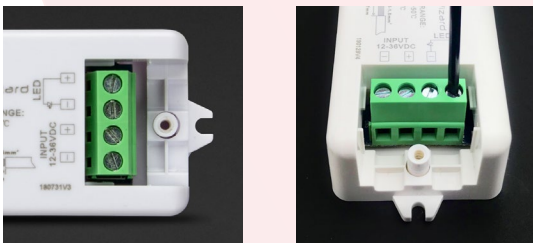

Step 4:


Securely install the stripped Power Supply wires into the opened "INPUT" side of the terminal-block by tightening back the screw. The Red wire should be connected to the "+" slot of the "INPUT" and the Black wire connected to the "-" slot.

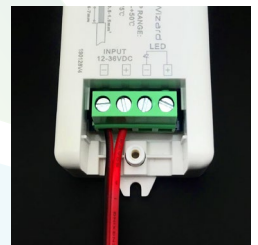

Step 5:



Strip off ¼" of the wires from the LED fixture and connect them to the "LED" side of the terminal-block by similarly following steps 2. and 3.

Lightly pull the wires to test and make sure that they are strongly connected. Place back the end cap removed in step 1. Wiring is complete and you can now power up.

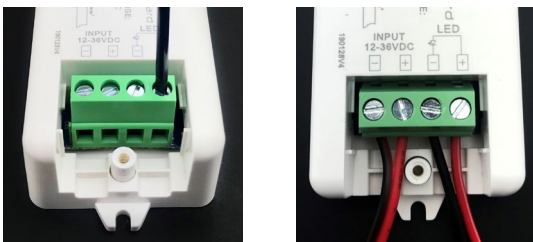

Step 6:

Optional: You can connect a Spring-Loaded Rocker Switch to the Dimming-Receiver to control your LED fixtures with it (on/off and dimming functions). To do this, connect the Spring-Loaded Rocker Switch to the green "Push Switch" terminal-block with the positive wire from the switch connected to the "+" of the "Push Switch" terminal-block, and the negative wire from the switch connected to the "GND" slots.

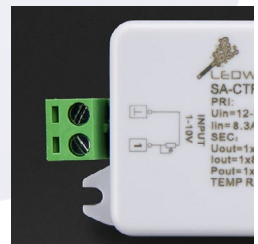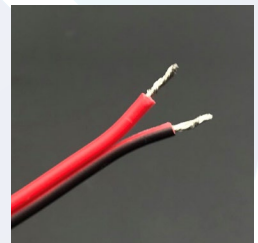

Product Wiring and Installation


Wiring & Installation of GlassTouch Dimmer

Once the wiring of the Dimming-Receiver to a Power Supply and LED Fixture is completed, the only remaining thing is to install the GlassTouch Dimmer and pair it to the Dimming-Receiver.

1. Preparation to install the GlassTouch dimmer:

- i. Identify the installation location (an available single gang box) for the GlassTouch dimmer.
Note: MUST be a single gang box unit with Live and Neutral wires inside.
- ii. Make sure power to the gang box is shut off from the Circuit Breaker.
- iii. Remove any existing switch in the gang box and bring out the wires for wiring to the GlassTouch.
- iv. Separate the faceplate of the GlassTouch from the backplate by pushing a slot-head screwdriver into the opening tab (see picture **A**) and then gently twisting the screwdriver.
- v. Put the faceplate aside and take the backplate for connecting the wires in the gang box.

A.

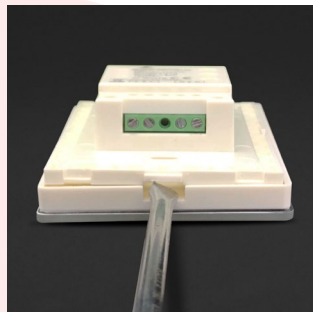

2. Wiring the GlassTouch dimmer:

- i. Open the Screw Terminals by partially unscrewing the screws in each L and N terminal.
- ii. Firmly install the Live wire(s) (Black) to the "L" terminals and tighten the screws, and install the Neutral wire(s) (White) to the "N" terminals and tighten the screws (see picture **B**).
- iii. Lightly pull the wires to test and make sure that they are strongly connected.

B.



Product Wiring and Installation (continued)

3. Mounting the GlassTouch Dimmer:


- i. Once wiring is complete, push the wires back into the gang box and mount the backplate to the gang box using the provided screws (see picture C).

Note: Ensure that the **opening tab** is located on the **bottom side**.

- ii. Install the faceplate back onto the mounted backplate. Make sure that it properly clicks in place.


Note: Ensure that the **connecting pins** at the middle of the backplate are **not bent** and that they are properly inserted into their slots on the faceplate.

C.

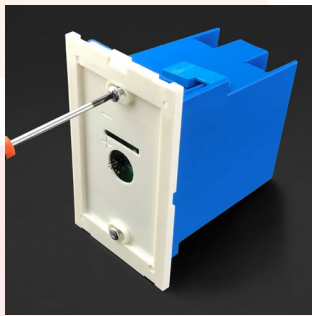

Pairing the GlassTouch Dimmer to the Dimming-Receiver

- i. Push the “**Learning Key**” button on the Dimming-Receiver you desire to pair.
- ii. Push and hold the “**Z**” button on the GlassTouch Dimmer for the zone you desire to pair to the dimming-receiver. The lights will flash and turn off once pairing is successful.

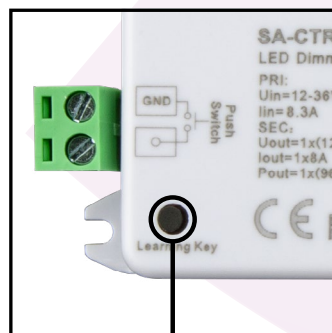


Learning Key Button



Z Buttons

Wiring Diagram

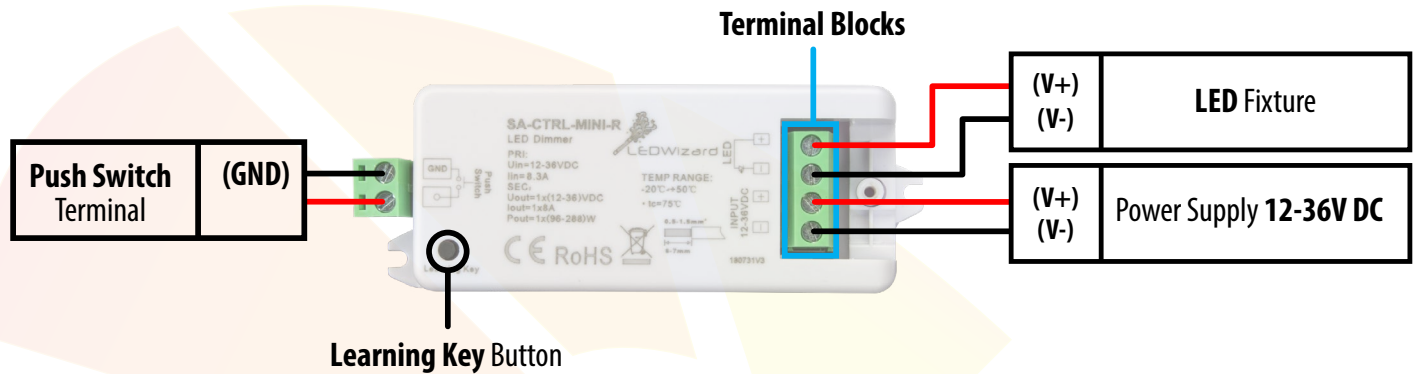

Product Operation


Buttons and Functions

See diagram for corresponding button numbers.

- A. Turn **ON/OFF** the LED Fixtures
- B. Control **brightness** of LED Fixtures by sliding up/down
- C. Zone **Selection** (Zone 1 to Zone 4)
- D. Brightness **saving** and **recalling**

Operations

- Simple tap of pad **A** will **turn OFF** the LED Fixtures
- Tap and hold of pad **A**. will **turn OFF** all the Zone
- Simple tap of any pad in **C**. will **select** the corresponding Zone for controlling it
- Tap and hold of any pad in **C**. will turn **OFF/ON** all Fixtures in that Zone
- Slide up/down of pad **B** will **dim/brighten** the LED Fixtures in the selected zone
- Tap and hold of any pad in **D**. (until the lights flash) will **save** the current brightness settings to that pad (S1-S3).
- Simple tap of any pad in **D**. will **recall** the brightness saved in that pad in the currently selected zone.

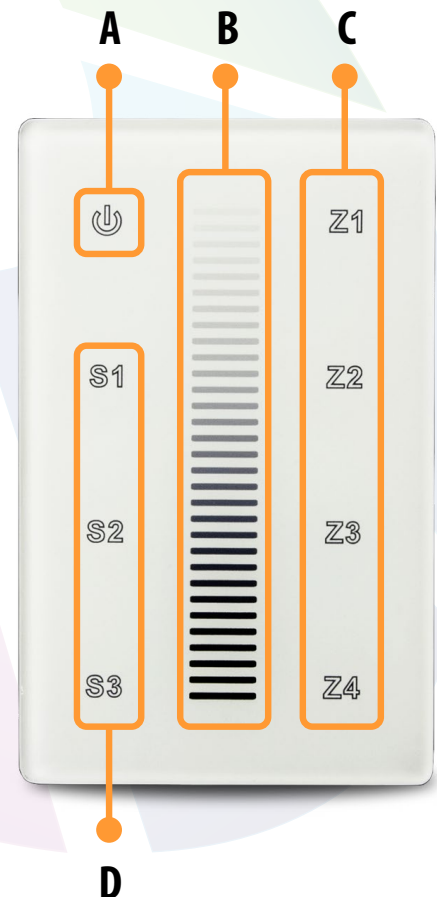

Product Troubleshooting

This section will show you how to troubleshoot the GlassTouch Pro-S 4-Zone Wireless Dimmer Wall Switch.

1. **Dimmer backlights not on after installation:** If the dimmer back lights are not ON after installation, check to make sure that the wiring is properly done with the Live wires connected to the “L” and Neutral wires connected to the “N”. See *Wiring & Installation of GlassTouch Dimmer (Pg.4)* section.
2. **Dimmer is working but lights not responding:** If the backlights on the GlassTouch dimmer are ON and tend to brighten up in response to buttons being pressed that means it (the dimmer) is working, however, if the LED fixture is not responding accordingly then there must be pairing issues between the dimmer and dimming-receiver or issues with wiring the LED fixture to the dimming-receiver. Here is how to identify and fix the problem(s):
 - a. **Dimming-Receiver not powered correctly:** Check to see that the wires from the Power Supply are properly wired/connected to the “input” side of the dimming-receiver’s terminal block with red connected to the “+” and black connected to the “-”. Ensure that there is strong contact between the wires and terminals.
 - b. **LED fixture’s cables not connected correctly:** Check to make sure that the LED fixture’s wires are correctly connected to the “LED” side of the dimming-receiver’s terminal block with red connected to the “+” and black connected to the “-”. Ensure that there is strong contact between the wires and terminals.
 - c. **Dimming-Receiver not paired:** Make sure that the dimmer and dimming-receiver are paired for the system to work. See *Pairing the GlassTouch Dimmer to the Dimming-Receiver (pg.5)* section.
 - d. **Dimming-Receiver not properly paired:** First, unpair/reset the system by pressing and holding the “Learning Key” on the dimming-receiver for a few seconds until the lights flash. Then re-pair again by following the *Pairing the GlassTouch Dimmer to the Dimming-Receiver instructions (Pg.5)*.
 - e. **Signal from GlassTouch Dimmer not getting to Dimming-Receiver:** Ensure that the dimming-receiver is within 65 feet range from the dimmer and not fully enclosed in a metal box.
 - f. **GlassTouch Dimmer and Dimming-Receiver paired but lights not responding:** If the lights flash during the pairing process to indicate successful pairing but do not respond thereafter, it may be due to the lights being completely dim by factory default. Therefore, press the “Learning Key” button on the dimming-receiver once, and then press and hold the brightening up button on the dimmer until the lights brighten fully. The lights should work perfectly after that.